



No.	Description	Part No.	
		35mm-39mm	26mm-33mm
1	Rubber Cap	1028-809-7000	R028-004-7000
2	Velocity Stack SH.	1130-802-2001	1130-800-2001
2A	Velocity Stack LN.	1130-803-2001	1130-801-2001
3	Clamp	1129-804-7000	1129-803-7000
4	Mount Adapter	1253-xxx-xxxx	<---
4A	Mount Adapter	N195-xxxx	<---
5	O-ring	0901-012-6000	0901-812-6000
6	Tension Spring	1291-804-2000	<---
7	Tube	0804-846-0000	<---
8	Collar	1118-878-2000	<---
9	Screw	4139-802-1100	<---
10	Top	1030-814-2002	<---
11	Gasket	1031-802-2002	<---
12	Jet Needle	N427-51xxx	N427-11Yxx
12A	Jet Needle	N/A	N427-12Yxx
13	Clip	0403-802-1000	<---
14	Lock Nut	0208-803-1200	<---
15	Stop Screw	1034-814-2000	<---
16	Screw	W9155-04060	<---
17	Valve Plate	1019-801-2102	1019-802-2102
18	Clip	16179-676-3000	<---
19	Plain Washer	0301-825-7000	<---
20	Link Arm	1061-805-2000	<---
21	Spring	1291-802-2000	<---
22	Throttle Valve	N502-03x00	N502-04x00
23	Float Bowl	1050-825-2000	<---
24	Drain Screw	1018-801-2000	<---
25	O-ring	16173-001-0040	<---
26	Starter Jet	1001-108-2000-xxx	<---

27	O-ring	0901-811-6000	<---
28	Arm Pin	W9525-25250	<---
29	Float	1052-818-2100	<---
30	Clip	0405-019-1000	<---
31	Needle Valve	16115-ZG8-L100	<---
32	Screw	NI14-06161	N/A
33	Plate	1164-038-2000	<---
34	Valve Seat	N360-01x00	<---
35	O-ring	16075-MB0-0030	<---
36	Main Air Jet	N424-14xxx	<---
37	Slow Jet	N424-24xxx	<---
38	Main Jet	99101-357-xxx0	<---
39	Nozzle Holder	N413-04x00	<---
39A	Nozzle Holder	N426-04000	<---
40	Screw	4115-800-1101	<---
41	Jet Block	1605-xxx-2001	<---
42	Gasket	1202-808-2002	1202-809-2002
43	Needle Jet	1041-800-2001	<---
44	Air Screw	1014-004-2002	<---
45	Spring	1290-003-2001	<---
46	O-ring	0901-006-6000	<---
47	Screw	4110-806-1100	<---
48	Nut	0205-800-1100	<---
49	Bolt	0118-801-1100	<---
50	Plain Washer	0301-009-1100	<---
51	Wave Washer	2007-800-2000	<---
52	Plain Washer	0301-104-7000	<---
53	Clip	W9302-25000	<---
54	Collar	1118-801-1100	<---

55	Shaft	1111-813-2000	<---
56	Lever	1113-851-2001	<---
57	Lever	1113-852-2000	<---
58	Screw	4139-833-1100	<---
59	Bracket	1190-833-2000	<---
59A	Bracket	N/A	1190-853-2001
59B	Bracket	N/A	1190-854-2001
59C	Bracket	N/A	1190-855-2001
60	T-joint	1077-834-7000	<---
61	T-joint	1077-833-7000	<---
62	O-ring	W9531-13057	<---
63	Washer	0301-030-1201	N/A
64	Plate	1190-832-2000	<---
65	Rubber Cap	1028-838-7000	<---
66	Clip	W9535-55000	<---
67	Link Lever	1100-836-2100	<---
68	Collar	1118-851-7000	<---
69	Collar	1118-850-7000	<---
70	Spring	1305-833-2000	<---
71	Throttle Shaf.	5025-847-2200	<---
71A	Throttle Shaf.	5025-931-2100	N/A
72	Screw	41139-303-1100	<---
73	Bracket	1190-xxx-xxxx	<---
74	Idle Speed Screw	1034-838-2000	<---
75	Spring	1290-849-2003	<---
76	Plain Washer	16178-ML7-0040	<---
77	Nut	94001-J5080-0S	<---
78	Screw	93500-J5025-1H	<
79	Rubber Cap	1028-042-7001	<---
80	Cap	1029-805-7000	<---
81	Spring	1300-136-2000	<---
82	Starter Valve	1166-802-2101	<---
83	Seal	1099-805-7000	<---
84	L-joint	1074-817-7001	<---
85	Starter Jet	1001-108-2000-xxx	<---
86	Cap	1096-810-2000	<---
87	Bracket	1190-870-2000	N/A