

NO.	Description	Part No.	
		35MM-41mm	32mm-33mm
5	Top	1030-855-2000	
6	Gasket	1031-806-2000	1031-805-2000
6A	Gasket (For14mm)	1031-807-2000	
8	Screw (M4x10)	0136-807-1100	
9	Screw (M4X8)	0136-808-1100	
10	Bracket	1190-xxx-xxxx	
11	Screw	0136-803-1100	
12	Throttle Shaft	5025-xxx-xxxx	
13	Collar	1118-958-7000	
14-a	Coil Spring (sgl/dual)	1305-932-2001	
14-b	Coil Spring (4 carb)	1305-A30-2000	
15	Washer	0301-092-7000	
16	Link Arm Comp.	1061-816-2100	1061-815-2100
17	Hex Nut	0208-811-1100	
18	Stop Screw	1034-836-2000	
19	Throttle Valve	N501-20x00	N501-18x02
20	Roller	1119-803-7002	
21	Plate	1609-802-2101	1609-801-2101
22	Seal	1099-817-2001	1099-816-6001
23	Jet Needle	N427-0Cxxx	N427-90xxx
24	Clip	0403-802-1000	
25	Set Screw	1421-801-2000	
26	Main Nozzle (D/D)	1154-835-2100	
27	Main Jet	99101-357-xxx0	
28	Slow Jet	N424-25xxx	
30	Slow Air Jet Old No.	990101-124-xxx0 (99101-ZF5)	
30A	Air Screw	1014-817-2000	
30B	Coil Spring	16052-KM4-0040	
32	Pilot Screw	N446-05A00	
33	Coil Spring	1290-812-2000	
34	O-ring	16075-KG8-9010-M1	
35	Washer	0301-803-2000	
36	Valve Seat (1.6mm-2.6mm)	N361-03XX1	
36	Valve Seat (3.2mm-4.0mm)	N361-04XX1	

37	O-ring	16958-397-7710-M1	
38	Screw	0118-804-1100	
39	Float Comp.	1052-837-2200	
40	Arm Pin	W9525-25250	
41	Screw	93500-04008-1H	
42	Float Valve (1.6-2.6)	16155-2G8-L100	
42	Float Valve (3.2-4.0)	1062-814-2101	
43	Clip	0405-019-1000	
45	O-ring	1202-846-6000	
47	Cover	1230-826-2001	
48	Float Bowl (D/D)	1050-862-2100	
48	Float Bowl (D/D)	1050-863-2100	
48	Float Bowl (D/D)	1050-864-2100	
48	Float Bowl (D/D)	1050-865-2100	
48	Float Bowl (D/D)	1050-866-2100	
48	Float Bowl (D/D)	1050-868-2100	
48	Float Bowl (H/L)	1050-880-2100	
48	Float Bowl (H/L)	1050-881-2100	
48	Float Bowl (H/L)	1050-882-2100	
48	Float Bowl (H/L)	1050-883-2100	
48	Float Bowl (H/L)	1050-885-2100	
48	Float Bowl (H/L)	1050-886-2100	
51	Diaphragm Comp.	1201-055-2101	
52	U-	W9353-36000	
53	Coil Spring	1300-142-2000	
54	O-ring	16178-548-0040	
64	Link Lever	1100-870-2100	1100-868-2100
65	Link Lever #2 D/D	1100-867-7001	
65	Link Lever #2 H/L	1100-872-7000	
66	Coil Spring #1	1305-933-2000	
67	Coil Spring #2 D/D	1305-939-2000	
67	Coil Spring #2 H/L	1305-952-2000	
68	Rod	1458-825-2000	
68	Rod GSXR Liquid Cool	1458-827-2000	
69	Washer	0301-136-7000	
70	Pin	16181-PC3-7810-M1	
71	Rubber Cap	1028-825-2001	
72	Rod (D/D)	1458-826-2000	

72	Rod (H/L)	1458-829-2000	
73	Washer	0301-114-1000	
74	Collar	G1704-241-9900	N/A
76	Bolt	0136-xxx-xxxx	
77	Collar #1	N704-010xx	
78	Collar #2	N704-020xx	
79	Collar #3	N704-030xx	
80	Rubber Hose	0804-xxx-xxxx	
81	Air Vent Joint	1077-826-7000	
82	U-ring	W9353-65000	
84	Fuel Joint	1075-xxx-xxxx	
85	O-ring	W9351-13057	
88	Rubber Hose	0804-xxx-xxxx	
89	Fuel Joint	1077-xxx-xxxx	
90	Idle Speed Screw	1034-837-2100	
91	Washer	0301-078-1200	
92	Coil Spring	1300-112-2000	
100	Screw	0136-804-1100	
103	Main Air Jet	99101-393-xxx0	N/A
122	O-ring	16075-935-0060	
123	Drain Bolt	1018-804-2000	
124	Rubber Hose	0804-437-0001	0804-986-0000
125	Mount Adapter	N195-xxxxx	
125	Mount Adapter	1253-XXX-2000	
126	Velocity Stacks (30MM)	1130-808-7000	1130-809-7000
126	Velocity Stacks (50MM)	1130-807-7000	1130-806-7000
127	Rubber Cap	1028-808-7000	
128	Clip	W9535-55000	
136	Clip	W9535-35000	